




# Acer Iconia W3-810 Front Facing Camera

This guide demonstrates how to replace the Front Facing Camera.

Written By: Griffin Hocker

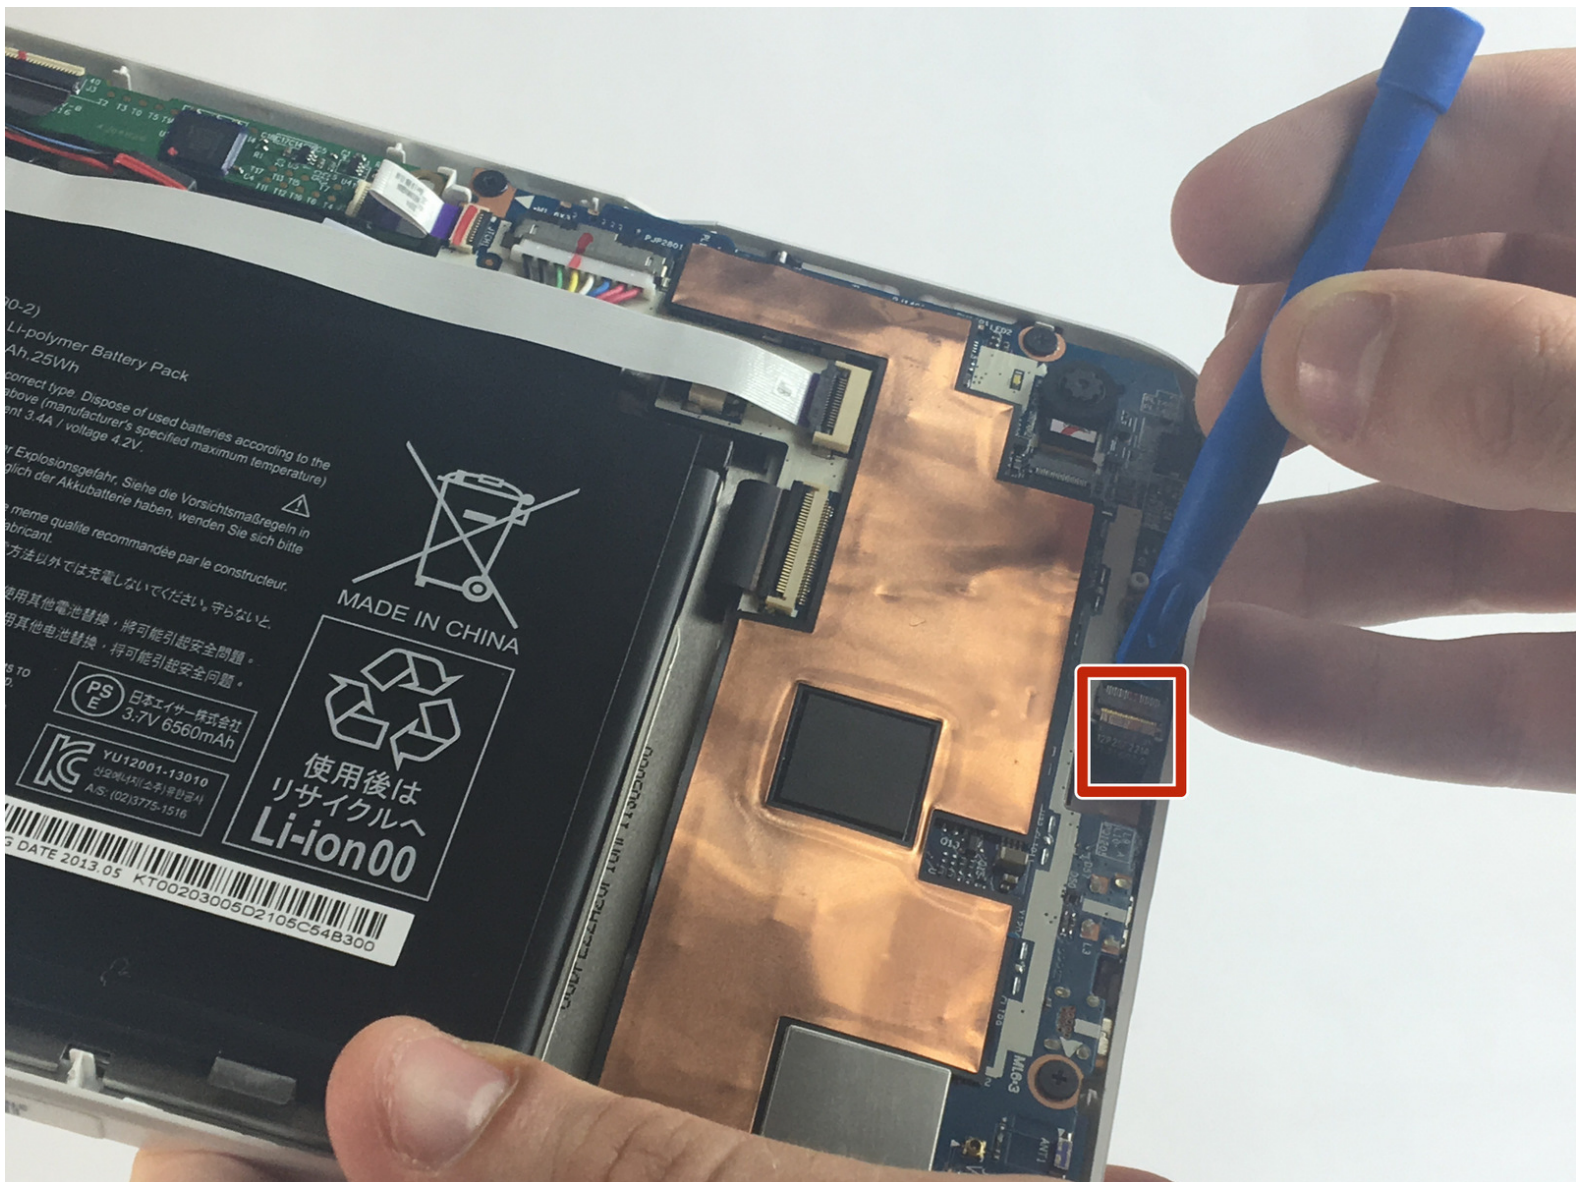

## INTRODUCTION

This guide is to be used for replacing the front-facing camera of an Acer Iconia W3-810. This is in case of physical damage or water damage to the camera.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Panel




- Place the tablet face down on a flat surface with the charger facing toward you.

## Step 2




- Use a plastic opening tool to pry the back panel off of the device.

 Be careful to not use the plastic opening tool near the charging dock or any media ports.




## Step 3 — Front Facing Camera

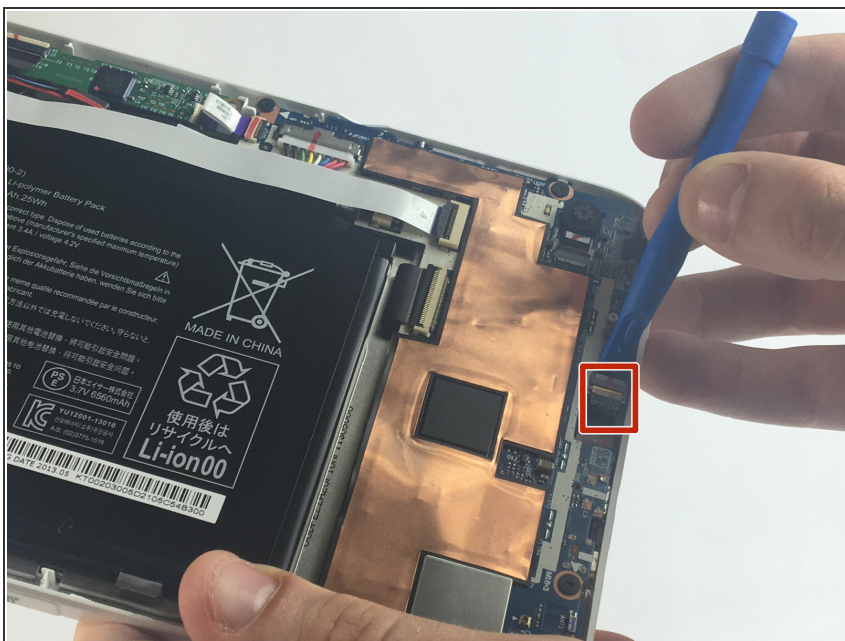


- Loosen the retaining flap connected to the front-facing camera by lifting it with a plastic opening tool.

## Step 4

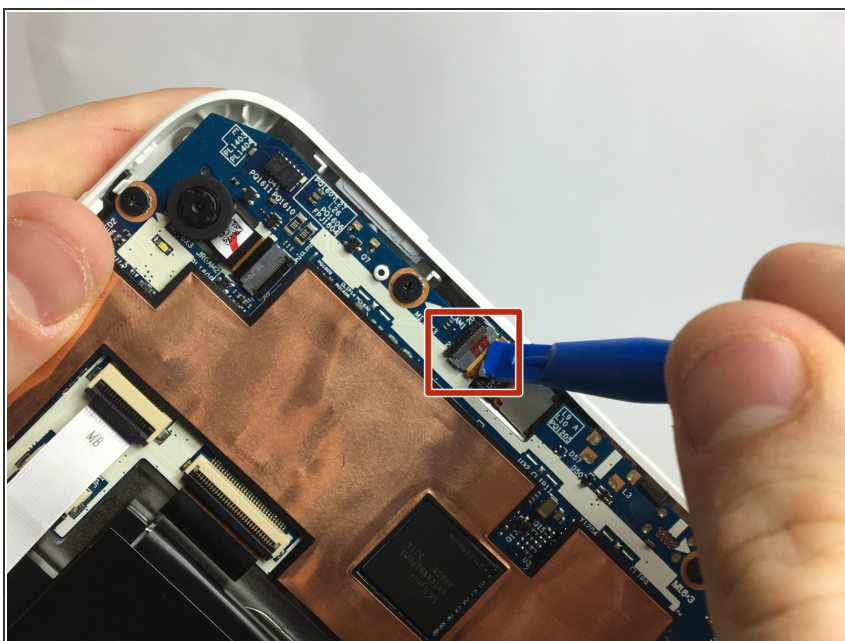

- Remove the ribbon cord from its slot by pushing it out with a plastic opening tool.

## Step 5

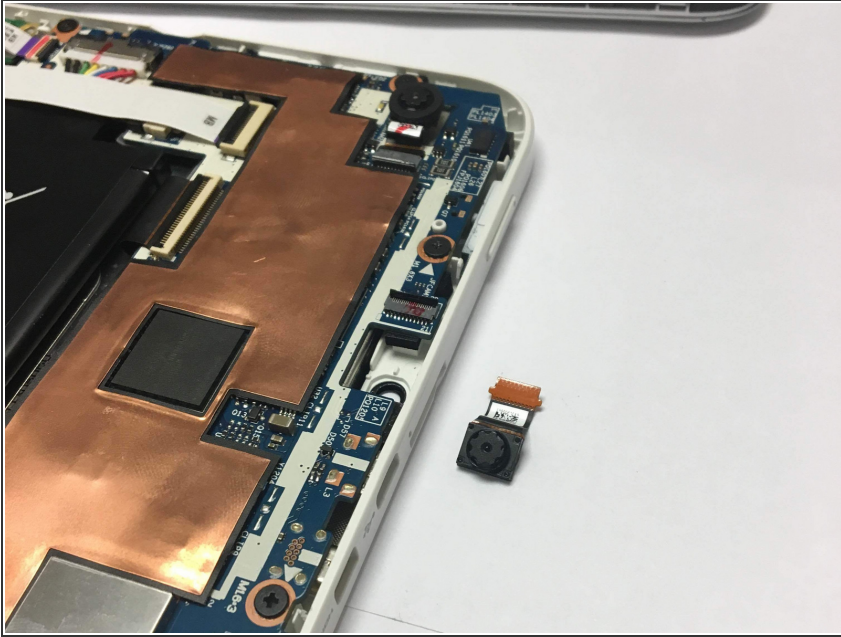

- Simple replacement for another camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 07:44:08 PM.